




# 一分钟玩转 Paperlike Pro

## 【配件说明】

■ DASUNG 定制 “Y” 形 HDMI 数据与供电二合一线缆（用于电脑与 Paperlike Pro 连接）

## 【连接设备】

首先，请确保您的电脑有 HDMI 接口、USB 接口，否则需要使用转换器（参见特别提示 1、2）。然后，用 “Y” 形 HDMI 线缆将电脑与 Paperlike Pro 连接（如图示）。电脑端需同时连接 HDMI（数据传输）和 USB（供电），Paperlike Pro 端连接 Mini-HDMI。您也可以单独将 USB 接头连接到 USB 充电器上用于供电。

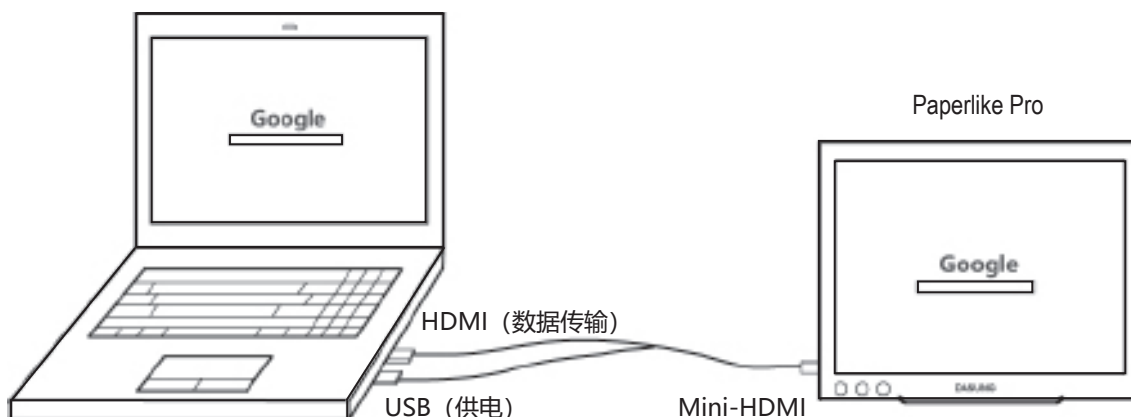

“Y” 形 HDMI 线缆连接后，Paperlike Pro 即可显示画面，无需按 “” 电源键。




## 【使用方式】

连接设备后，即可以显示画面，Paperlike Pro 默认使用 Floyd 画质模式。

- “C” 键可以快速清残影。
- “M” 键用于切换画面模式，此功能仅在安装 Paperlike Pro 功能增强软件时可以使用。
- “关机” 键，短按可以调对比度，长按 2 秒会关闭显示器。关闭后短按即可开机。

如果您想使用更多画质模式、智能飞刷清残影、进行屏幕保护等增强功能，请访问官网 ([www.dasung.com](http://www.dasung.com))，下载并安装 Paperlike Pro 功能增强软件。

## 【使用技巧】

- 1、推荐设置：使用默认的 Floyd 画质模式，1600\*1200 分辨率，系统缩放为 150%。
- 2、灵活调整 Paperlike Pro 功能增强软件中的“对比度”，按需设置，能使 Paperlike Pro 满足几乎所有办公学习需要。例如，看文本时可调整为“较深”；看图片时可调整为“较浅”。
- 3、电子墨水显示原理特殊，残影不可避免，按 Paperlike Pro 左下角  按钮可一键清除残影。
- 4、关闭电脑操作系统中的渲染效果，或将相关背景画面设置成纯白色，有助于减轻残影。
- 5、当 Paperlike Pro 无响应时，可同时按左下角的  +  按钮，重启显示器。

## 【特别提示】

- 1、由于 VGA 接口输出的是模拟信号，效果不如 HDMI 信号，画面可能闪烁或失真。建议您选用 HDMI 接口的电脑。
- 2、DVI/miniDP/DP/Thunderbolt 接口的电脑，请自配转接头（相应的接口转 HDMI 母座）。
- 3、Paperlike Pro 可以与 iPhone、iPad 一起使用。我们建议您使用苹果官方的适配器以获得更好的显示效果，其他适配器不保证能够使用。
- 4、如您在使用过程中遇到问题，请查阅完整版说明书，或直接致电：010-69908008，邮箱：[support@dasung.com](mailto:support@dasung.com)


# Quick start

## 【Accessories Description】

- USB-disk with Paperlike Pro software inside.
- Two special mini-HDMI to HDMI and USB cables. One for backup.
- A USB to USB cable for firmware upgrade in some emergency (non standard).

## 【How to Connect】

1. Make sure your PC has a full-HDMI port. Otherwise you will need to use an adaptor (See Note 1 & 2).
2. Use the Y-shaped HDMI cable to connect PC with Paperlike Pro. Connect Mini-HDMI to Paperlike. HDMI cable(for data) and USB cable(for power) should be connected with PC. You also can connect the USB cable to USB charger.

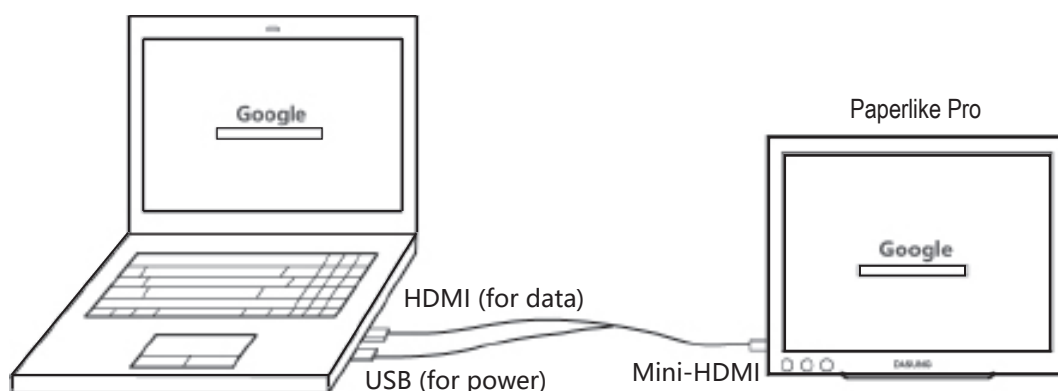

**After the Y-shaped HDMI cable is connected, Paperlike Pro will display the screen image. No need to click " ⏻ " button.**

## 【How to Use】

You can use Paperlike Pro without using the software.

- “ ⏻ ” button for clear the ghost.
- “ Ⓜ ” button for changing the image mode when you launch the Paperlike Pro.
- “ ⏻ ” button: short-press for adjustment the contrast, long-press for closing the screen.

But we STRONGLY recommend you use the software for more functions:

- To protect the screen better.
- To use more image modes.
- To use Blink Refresh for ghost remove.

Insert the U-disk, select proper package to computer operating system. Install the software.

After the software is installed, double-click the desktop " DS Paperlike Pro" icon to run the software, you can use a variety of enhancements.

## 【Skills】

1. Recommended setting: Default Floyd image mode, 1600\*1200 resolution, zoom at 150%.
2. Flexible adjustment of Paperlike Pro software "contrast", setting as required. It can let Paperlike Pro to meet almost all office and school needs. For example, use darker contrast for documents and lighter contrast for images.
3. E-ink displays principle is special. The ghost is inevitable. You can click ⏻ on Paperlike Pro.
4. Use the hot-key to remove the ghost. The hot-key can be set in the software.
5. Use white desktop background and close the render effects can reduce the ghost.
6. If Paperlike Pro has no response, you can press the ⏻ + Ⓜ

## 【Note】

1. For the computer with DVI/miniDP/DP/Thunderbolt interface, you can use the HDMI-mother adapter.
2. For the VGA port, the display effect might be bad, we do not recommend you use VGA.
3. Paperlike Pro can work with iPhone, iPad. We suggest you to use Apple's official adapter for better effects. Other adapters are not guaranteed to be used.
4. If you meet problems while using, please refer the full user manual or email: support@dasung.com